


Phottix® Cleon II

INSTRUCTION OF USE

Instruction of use

Single shooting: Set to On position on receiver and S/B position on transmitter. Half-pressing shutter button on transmitter for focusing (monitor light turns to green). Fully pressing shutter button to take photo (monitor lights of transmitter and receiver turn to red)

Two seconds delay: Set to On position on receiver and 2S position on transmitter. Half-pressing shutter button on transmitter for focusing (both lights turn green) and fully pressing shutter button (light turns red). It will take photo in 2 seconds.

Continuous shooting: Set to ON position on receiver and  position on transmitter. Fully press the shutter button one time, the camera will take five photos. If keep pressing shutter button, the camera will continuously take photos until release of hand. Or Set camera to Continuous mode, set to On position on receiver and S/B position on transmitter. Half press shutter button on transmitter for focusing. Fully press the button on transmitter for 3 seconds until monitor red light on transmitter turns off. The camera will operate on Continuous mode. To end the Continuous mode, press fully the shutter button.

Bulb mode - for long exposure: Set camera to Bulb mode and set to On position on receiver and S/B position on transmitter. Half press shutter button on transmitter for focusing. Fully press the button on transmitter for 3 seconds until monitor red light on transmitter turns off. The camera operates on B mode. To end B mode, press fully the shutter button.

Use receiver as wired remote without transmitter


(it can work with or without CR2 battery)

Single Shooting: Set to ON position and press shutter button.

Switching to Hold position can also take photo

Continuous shooting: Set camera on Continuous mode and receiver on On position. Fully press the button. Camera works on C mode until release of the button. Camera holds on C mode too when switch to Hold position until take the switch off Hold position

B mode: Set camera to Bulb mode and receiver to On position and fully press the shutter button. Camera will work with B mode until release of the button. Or just set switch to Hold position and camera will hold on B mode until take the switch off Hold position

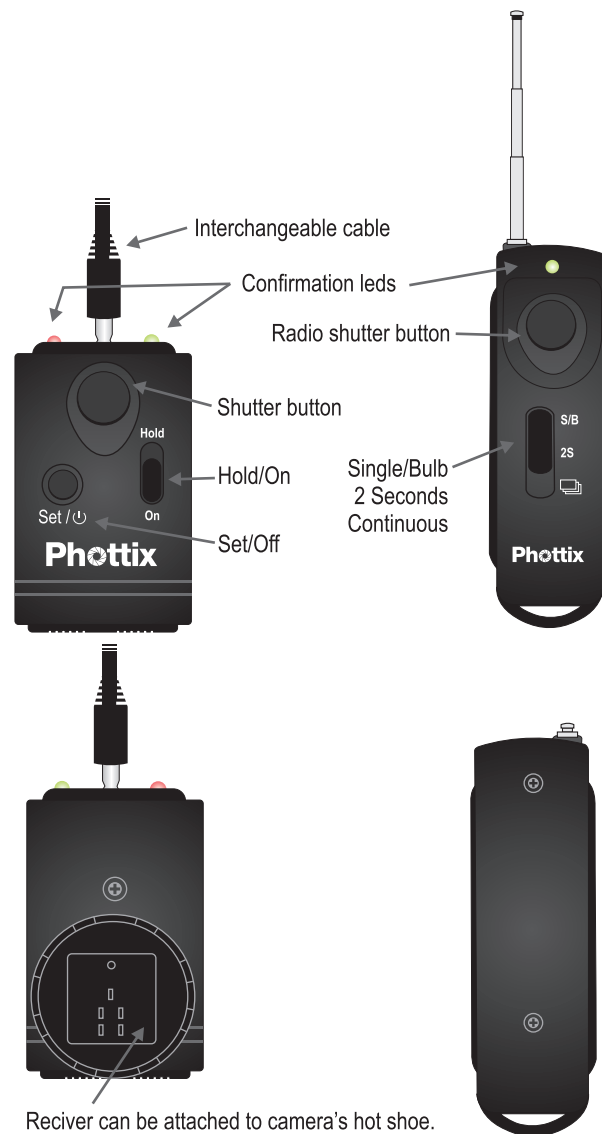

Notice to Usage

1. Turn off the power of the camera before insert the remote cord.
2. Smart code setting: Frequency pre-set in production. So you can use the remote instantly. In case change code in usage, press five times continuously the Set/ switch on receiver until light blinks, press the shutter button on transmitter one time to confirm the code. You can do this way to unlimited receivers with one transmitter. One transmitter can trigger unlimited receivers for unlimited cameras even with different brands.
3. Don't load and unload the receiver when the camera is on.
4. Make sure the remote cord is firmly mounted to the camera.
5. Turn On/Off receiver (press the Set/ button for three seconds). No Off switch on the transmitter (no power will be needed if it's not in usage).

Name of Product	Transmitter	Receiver
Power	12V/23A	3V/CR2
Life of Battery	Up to 3 yeras	20,000 Times
Smart Code System	16 000 000 combination codes	
Range	100m (320FT.) without obstacles	
Monitor Light	Two color LEDS	Two color LEDS
Frequency	433 MHZ	

Professional Photo Accessories

www.phottix.com